

Triac&0-10V (5 in 1)dim. (PMA-J Series) Installation Instruction



- Read instruction completely before installation.
- Turn off electricity before wiring.
- Only qualitied perssonal should install the unit. Installation must comply with the NEC
- Ensure the unit has input, output voltage and
- output wattage proper for your application.
- Ensure the installation environment is ventilated.
- Ensure the load is not overload.







R@HS TYPE HL NEMA 4X SELV Class P Class 2












Function Introduction

Fine tune voltage See below:


12V output: 9V-13V 24V output: 17V-25V


48V output: 36V-49V

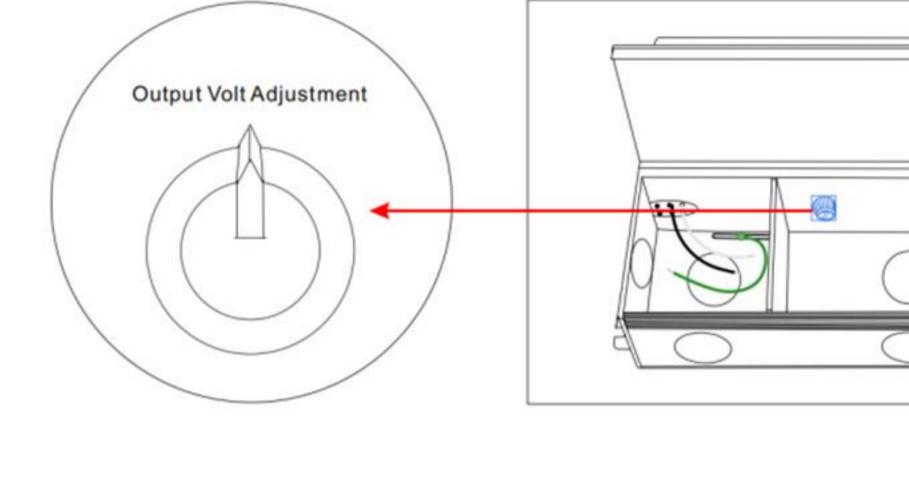



Mounting

- 1.This driver must be installed in a well-ventilated area free from explosive gases and vapors. Air circulation is essential for heat dissipation.
- 2. The LED driver must be mounted in at least 5" of a free flow air space for proper ventilation.
- 3.The LED driver must never be mounted next to or above heat radiated objects. The Maximum ambient temperature should not exceed 50 deg. C (122 deg. F). Suitable for dry,damp and wet location, IP65. (Vertical mounting is highly recommended.) 4. Select an appropriate location that is able to support the weight of the product.
- 5.Use the mounting tabs on the left and right side of the driver to mount the product.

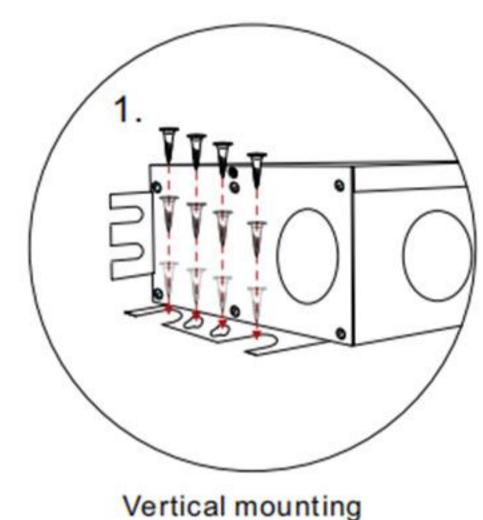

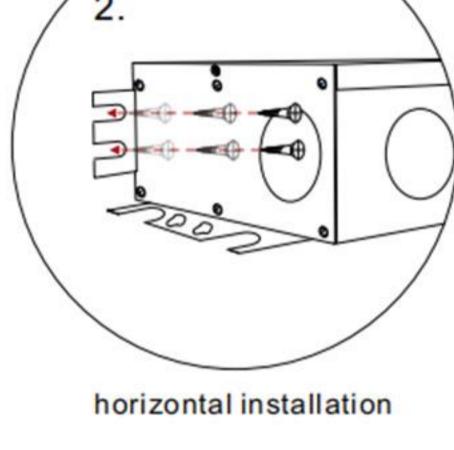


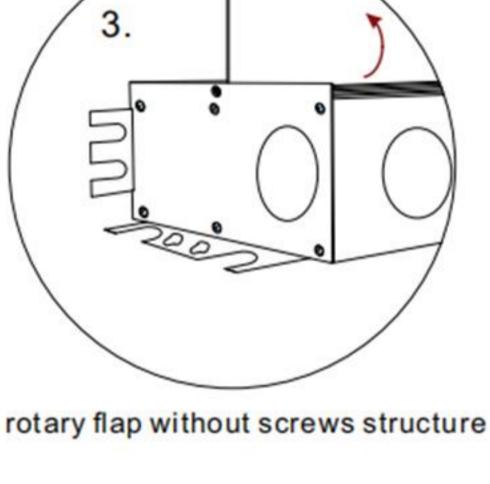


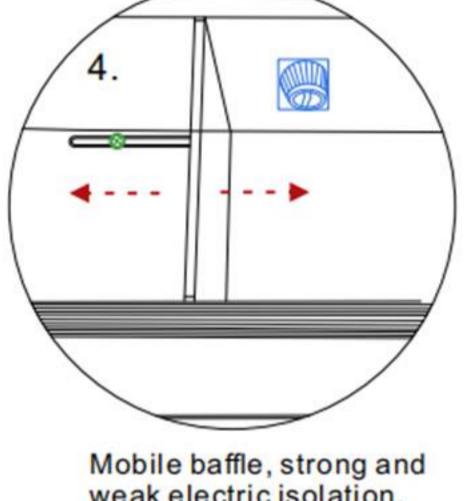


weak electric isolation, flexible adjustment of strong and weak electric space size

Connection Preparation

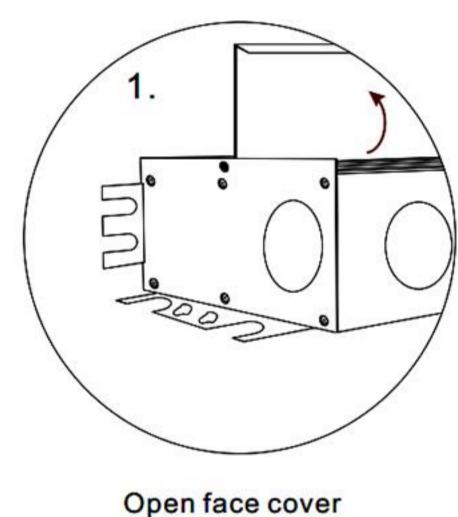


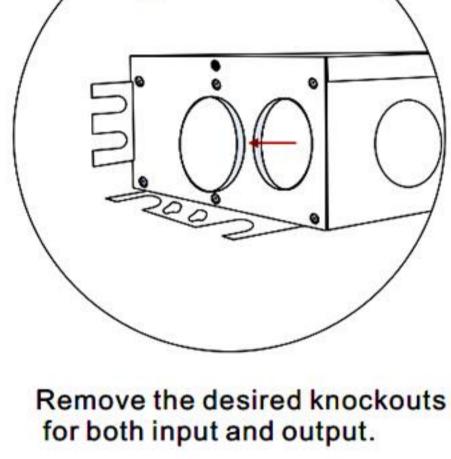

Input Connections & Grounding

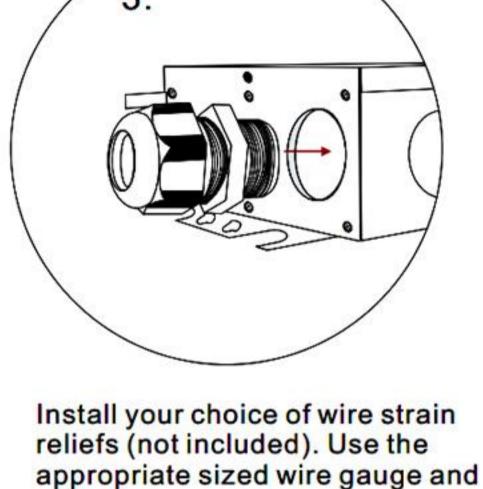



connectors.

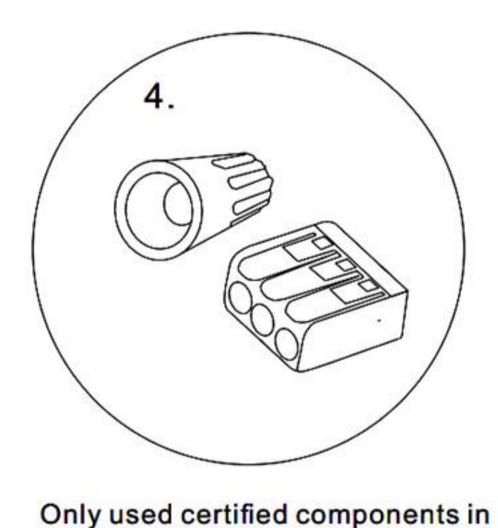


electric codes.


accordance with national and local

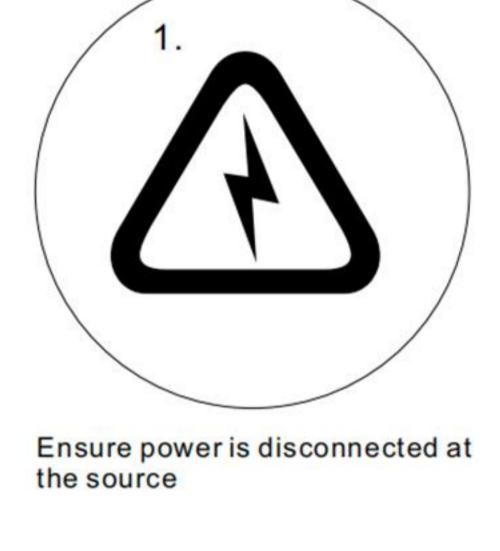


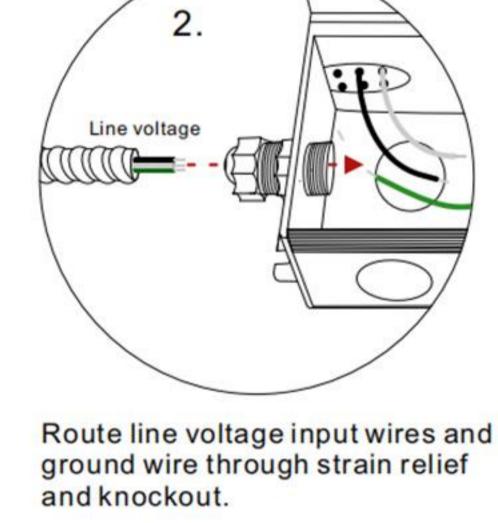

Output Connections-Single Channel Linear LED strip/tape (2 wires)

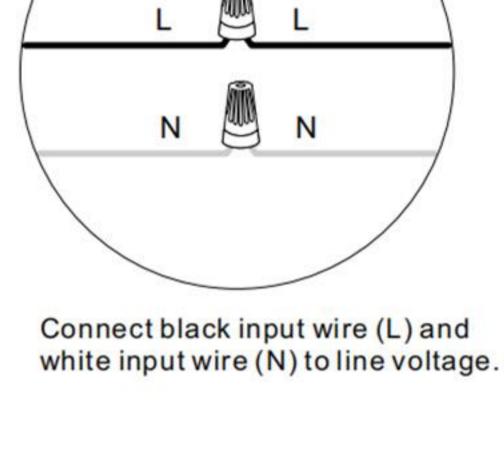

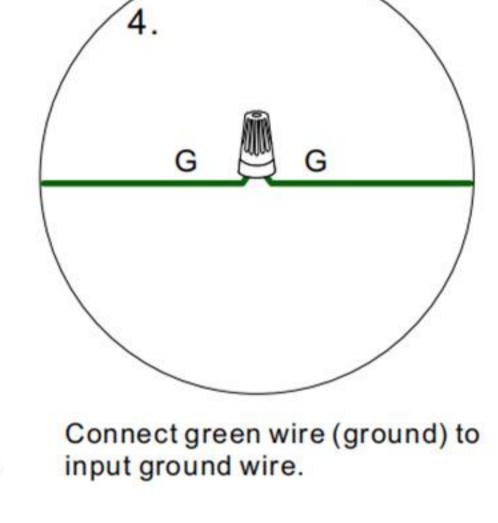


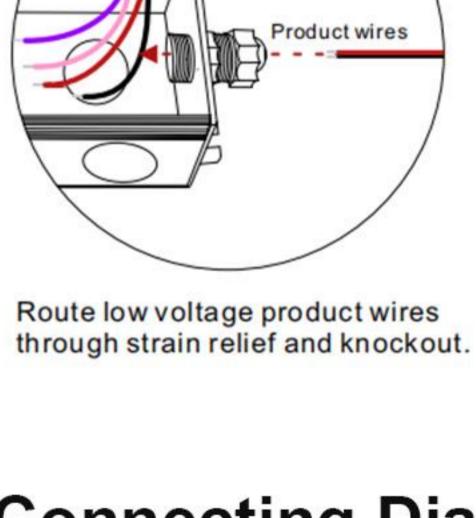


Connecting Diagram

Phase Dimmer

110 or 277VAC 60HZ

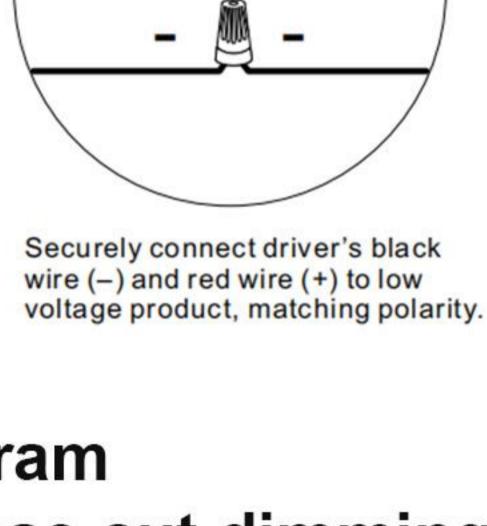


Using TRIAC/Phase cut dimming

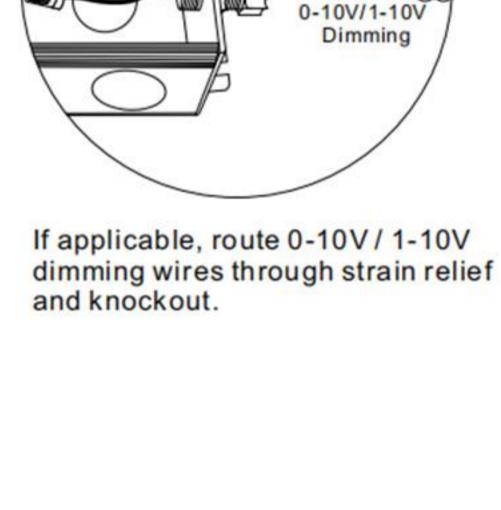

1.Through a phase-dimmer or lighting system, control the input AC phase line (L) and adjust the output PWM

Phase Dimmer


110 or 277VAC 60HZ

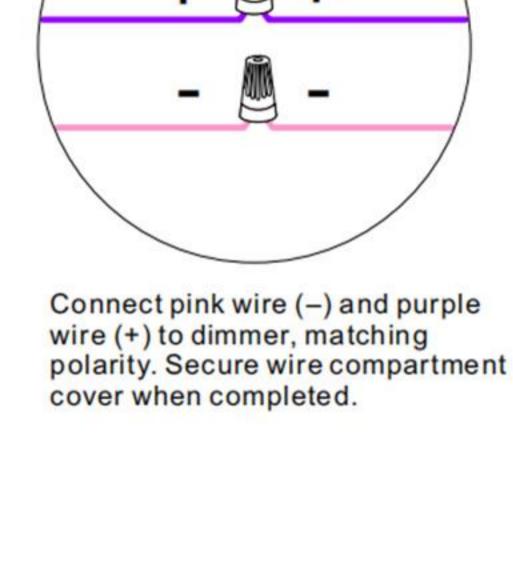

3.Please try to use dimmers with power at least 1.5 times as the output power of the driver. Wiring Diagram


2.Triac dim mode: Forward phase & reverse phase, MLV, ELV dim

Using Triac/MLV wiring diagram

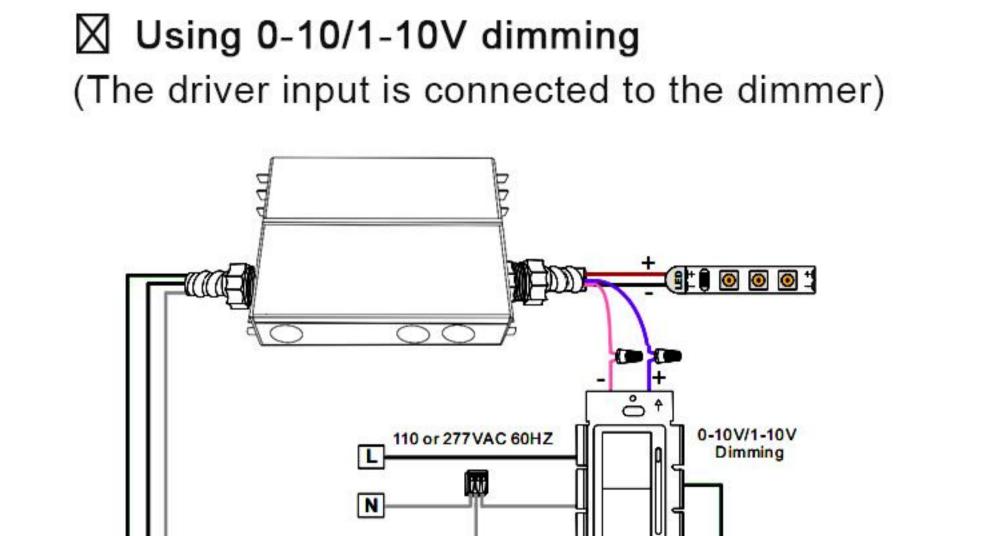


Load vs Ambient Temperature

Using Triac/ELV wiring diagram

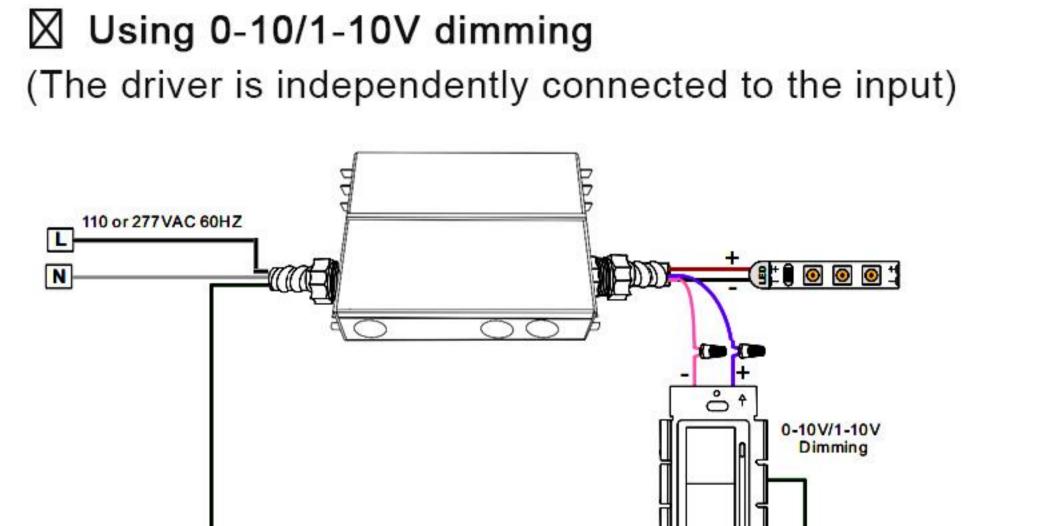

Skype: steven821228

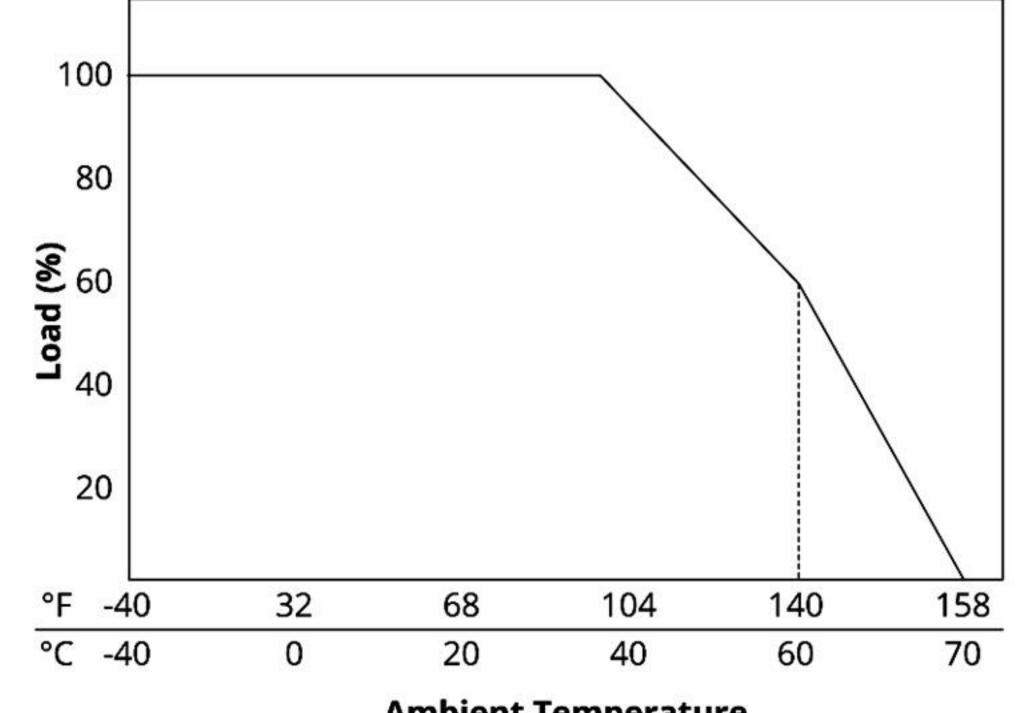

Ambient Temperature

WhatsApp: +8613489577737 Tel: +86 (595) 2725 6889



www.smartspower.com

E-mail: sales1@smartselectronics.com